EQUUS CUSTOMER DELIVERY CHECK LIST (continued)

- ☐ BLUETOOTH – page 14
  - Show phone compatibility website: www.hyundaiusa.com/bluetooth
  - Make a test call using Bluetooth with the customer's phone.
  - Demonstrate Voice Recognition (VR)

- ☐ WINDSHIELD WIPER/WASHER – page 07
  - Explain wiper function (int speed, front & rear wipers) and how it may differ from customer's previous vehicle

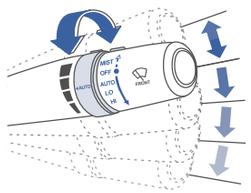

- ☐ CLOCK – page 21
  - Demonstrate how to set clock (including daylight savings setting for Navigation equipped vehicles)

- ☐ SMART CRUISE CONTROL – page 30
  - Allows you to set the distance from the vehicle ahead and maintain the selected distance even if you do not press the accelerator or brake pedal.

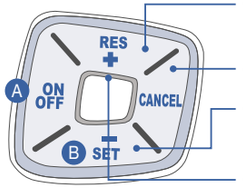

- To Resume or Increase the cruise control speed
- To Cancel the cruise control
- To Set or Decrease the cruise control speed
- To turn cruise control On/Off

1. Press button A to turn on.
2. Press B to set the speed.

Sales Consultant Date Sales Manager Date

Customer Date

@

Email

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil and Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Tire Rotation (staggered)	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Replace	More Frequently
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Disc Brake/Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Propeller Shaft	Inspect	15,000	Inspect	7,500 or 6 mos.
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses and Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Rear Disc Brake/Pads, Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Valve Clearance	Inspect	60,000	Inspect	Same As Normal
Drive Belt (Alt, A/C)	1st Inspect 60,000 or 48 mos. Add'l Inspect 15,000 or 12 mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	100,000 or 10 yrs.	Replace	More Frequently
Coolant	1st Replace 120,000 or 120 mos. Add'l Replace 30,000 or 24 mos.		Replace	Same As Normal
Automatic Transmission Fluid	Replace	60,000	Replace	60,000

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai Equus dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

NP150-N2012
(Rev 10/12/11)
Printing 10/XX/11

EQUUS | HYUNDAI

AT YOUR SERVICE

Quick Reference Guide

www.hyundai.com

Service: 1-877-EQUUS27
(877-378-8727)

TABLE OF CONTENTS

GETTING STARTED

Driver position memory system	03
Driver seat lumbar adjustment	04
Driver seat massage adjustment	04
Engine start/stop button	03
Front seat	02
Remot keyless entry	02
Seat belt height adjustment (front seat)	05
Steering wheel adjustment	05

FEATURES AND CONTROLS

Child-protector rear door lock	16
Climate control	10-11
Clock adjustment	21
Cool box	24
Driver's main controls	15
Front camera	24
Fuel filler lid	19
Head lights and fog lights	06
Heated steering wheel	20
Homelink wireless control	26
Instrument cluster	08-09
Instrument panel illumination	09
Massage seat–right rear seat	17
Parking Assist System (PAS)	17
Rear parking guide system	31
Rear seat controls – Locking	25
Rear window curtain	16
Seat warmer and cooler (front seats)	20
Sunroof	21
Trunk	18
Trunk lock button	19
Wipers and washer	07

MULTIMEDIA

Audio controls	12
AUX, USB and iPod port	13
Bluetooth phone pairing	14
Driver Information System (DIS) controller	14
Steering wheel audio control	12

DRIVING

Auto hold	29
ECO system	31
Electronic Air Suspension (EAS)	27
Electronic Parking Brake (EPB)	28
Electronic Stability Control (ESC)	27
Lane Departure Warning System (LDWS)	28
Rear monitor	29
Rearview camera	31
Smart cruise control system	30
Tire Pressure Monitoring System (TPMS)	31
Trip computer	09

*Some vehicles may not be equipped with all the listed features.

How to:
1. Pair phone to your vehicle. Refer to page 14.
2. Garage door opener set up. Refer to page 26.

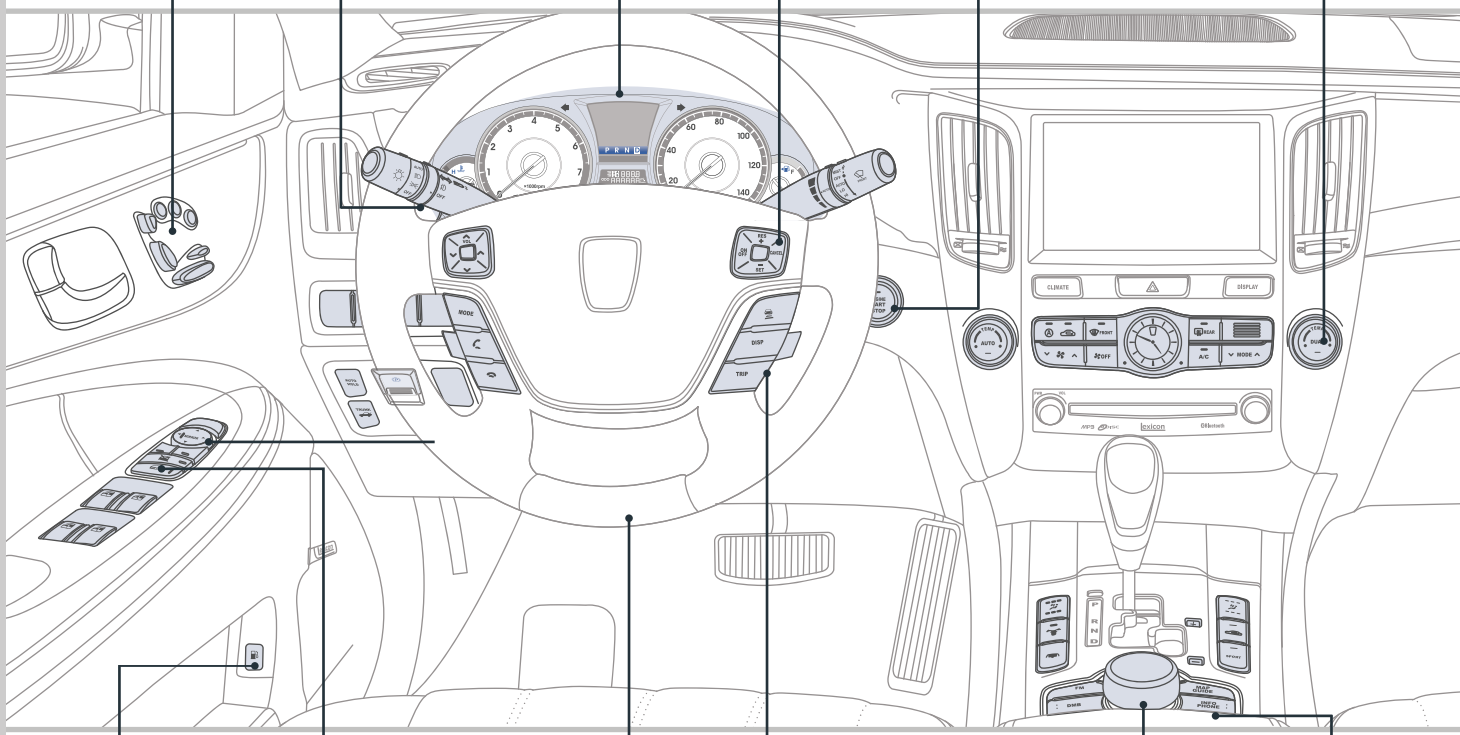

Front seat
Page 02

Head lights and fog lights
Page 06

Instrument panel illumination
Page 09

Smart cruise control system
Page 30

Engine start/ stop button
Page 03

Climate control
Pages 10-11

Fuel filler lid
Page 19

Driver's Main Controls
Page 15

Steering wheel adjustment
Page 05

Trip computer
Page 09

Driver Information System (DIS) controller
Page 14

AUX,USB and iPod
Page 13

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

⚠ WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

REMOTE KEYLESS ENTRY

- Lock
- Unlock
- Trunk unlock
- Panic

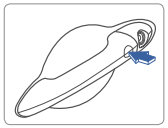

Lock
Press the door handle lock button.

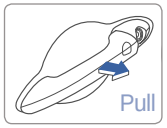

Unlock
Pull handle to unlock. Smart key must be within range.

NOTE Lock button will not unlock door.
If accidently pressed, wait 3 seconds to pull handle.

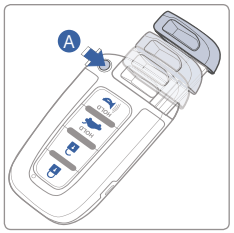

Remove mechanical key
Press and hold the release button Ⓐ to remove the mechanical key.

FRONT SEAT

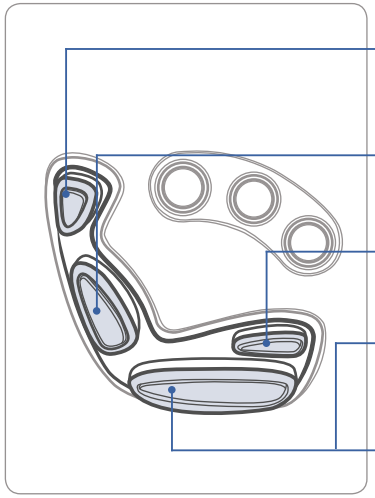



Headrest adjustment



Seatback angle



Cushion length adjustment (for driver's seat)



Forward and backward



Seat cushion height (for driver's seat)

ENGINE START/STOP BUTTON

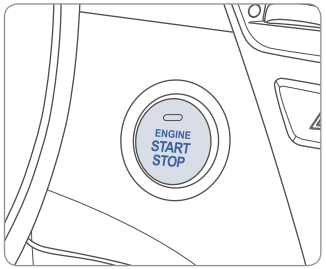

With the ignition OFF and foot OFF of brake pedal, press the engine start/stop button.

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine in any mode (including OFF), press the engine start/stop button while pressing the brake pedal.

To shut the engine OFF, place shift lever in P (Park) and press the engine start/stop button.

Emergency situations

Shut off engine while driving
Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.

Restart engine while driving
Press engine start/stop button with shift lever in N (Neutral).

DRIVER POSITION MEMORY SYSTEM

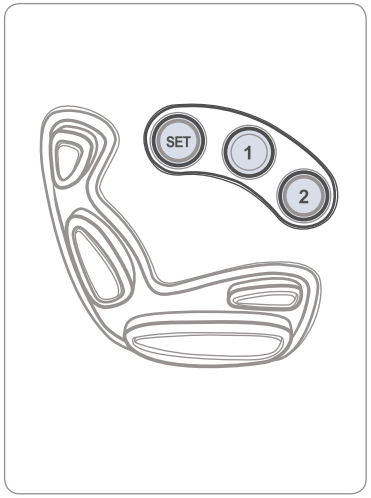

Storing

1. Adjust the driver's seat, outside rearview mirrors, and steering wheel.
2. Press the SET button. The system will beep once.
3. Press one of the memory buttons (1 or 2) within 5 seconds.

NOTE
Transmission must be in PARK.

Recalling

Press the desired memory button (1 or 2). The system will beep once.

DRIVER SEAT LUMBAR ADJUSTMENT

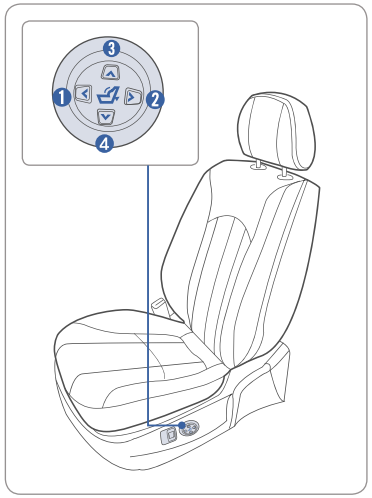

Press ❶ ( )
Increase lumbar support.

Press ❷ ( )
Decrease lumbar support.

Press ❸ ( )
Move the support position up.

Press ❹ ( )
Move the support position down.

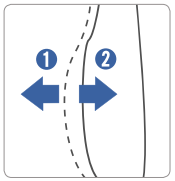

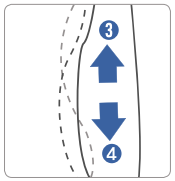

STEERING WHEEL ADJUSTMENT

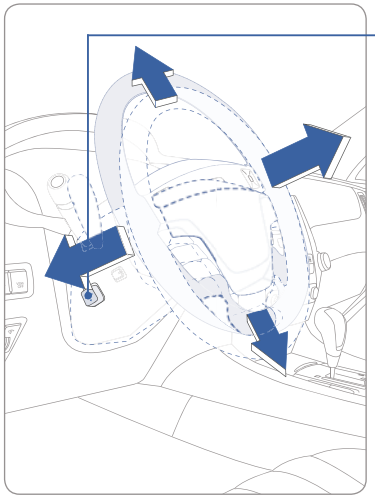

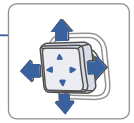

Toggle switch to adjust steering wheel.

NOTE
Do not adjust steering wheel while driving.

DRIVER SEAT MASSAGE ADJUSTMENT

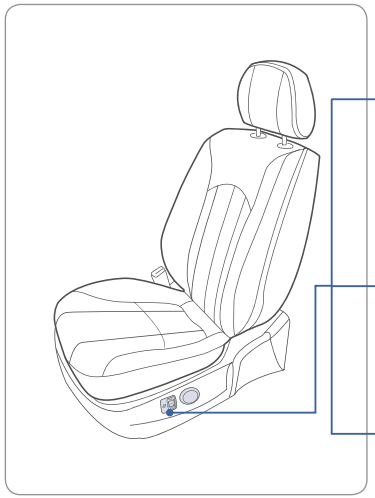

Slow Massage

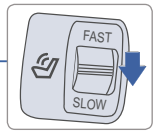

Move lever down.

Fast Massage

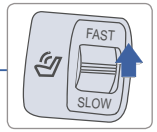

Move lever up.

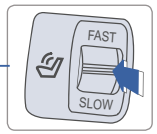

To turn the system off, press the lever in.

SEAT BELT HEIGHT ADJUSTMENT (front seats)

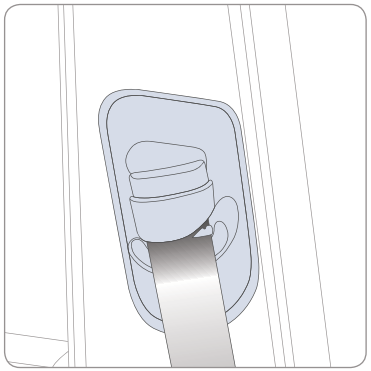

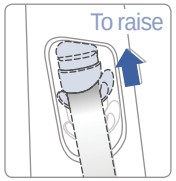

Pull up to raise.

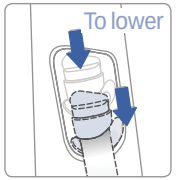

Press button and push down to lower.

HEAD LIGHTS AND FOG LIGHTS

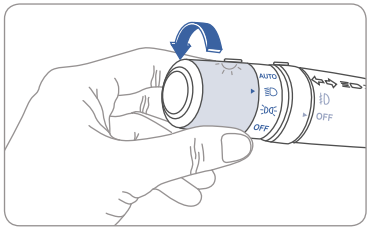

AUTO Auto light position

Head light position

Parking light position

OFF OFF position

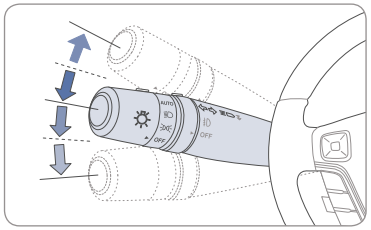

Turn signals and lane change signals

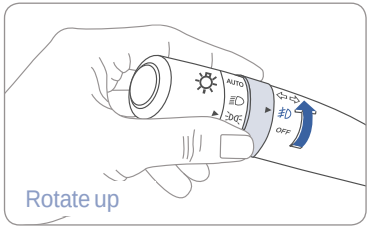

Front fog lights

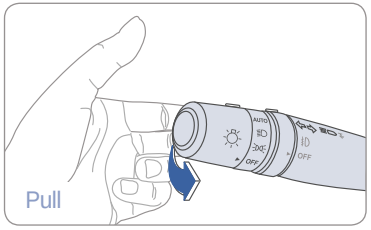

Flashing head lights

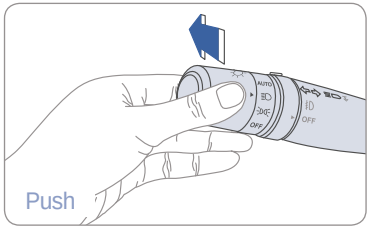

High beam

WIPERS AND WASHER

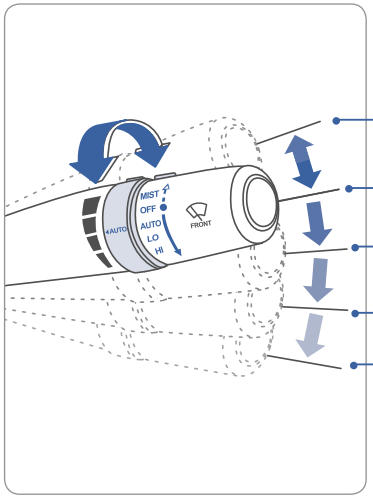

MIST – Single wipe

OFF

AUTO – Auto control wipe

LO – Low wiper speed

HI – High wiper speed

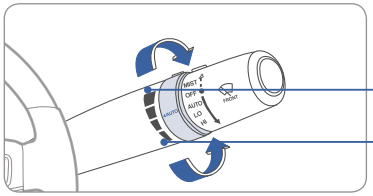

Auto control wipe interval adjustment
Rotate the control knob.

More sensitivity

Less sensitivity

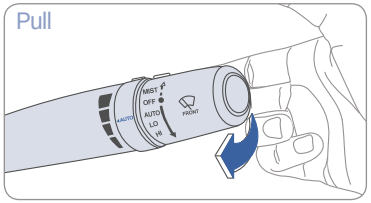

Windshield washer
Pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

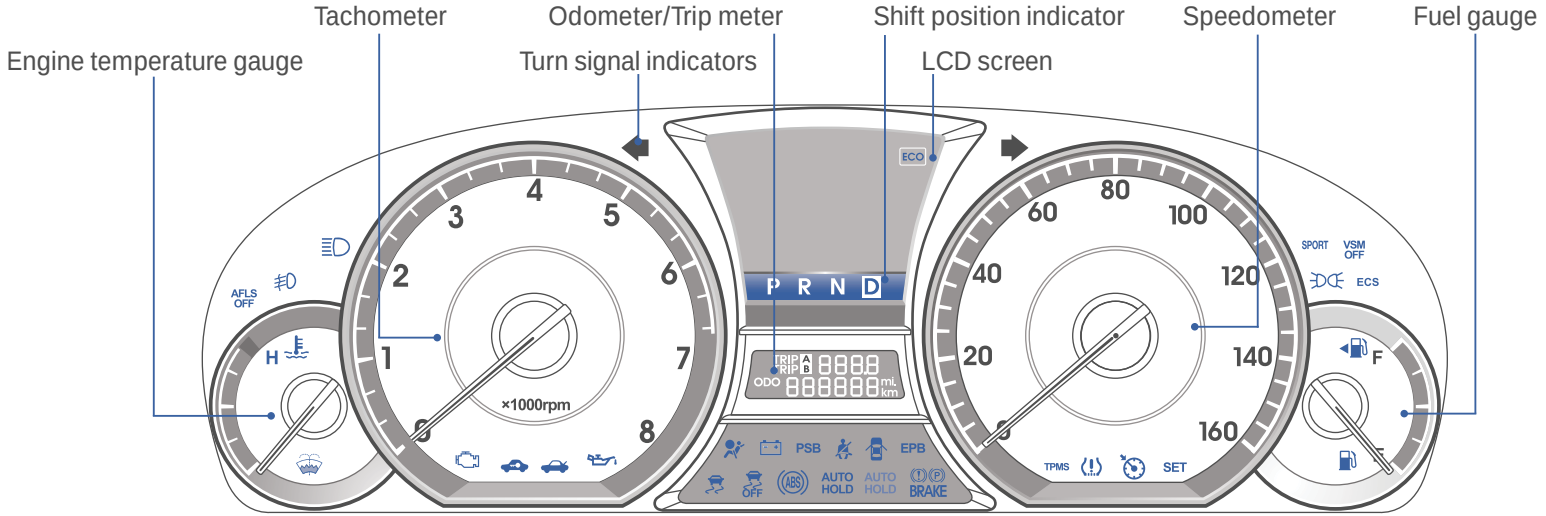

WARNINGS AND INDICATORS

Air bag warning light	Anti-lock brake system (ABS) warning light	Parking brake & brake fluid warning light
Seat belt warning	High beam indicator	Engine oil pressure warning light
Low tire pressure indicator	TPMS (Tire Pressure Monitoring System) malfunction indicator	Charging system warning light
Trunk open warning light	Door open warning light	Immobilizer indicator
Low fuel level warning light	Low washer fluid level warning light	Malfunction indicator light (MIL) (check engine light)
Front fog light indicator	ESC (Electronic Stability Control) indicator	ESC (Electronic Stability Control) OFF indicator
VSM OFF indicator	Cruise indicator	Cruise SET indicator
Seatbelt Tensioner system	EPB (Electronic Parking Brake) malfunction indicator	AUTO HOLD indicator
ECS (Electronic Control Suspension) malfunction indicator	AFLS (Adaptive Front Lighting System) OFF indicator	Turn signal indicator
Tail light indicator	Sport mode suspension	ECO indicator

INSTRUMENT PANEL ILLUMINATION

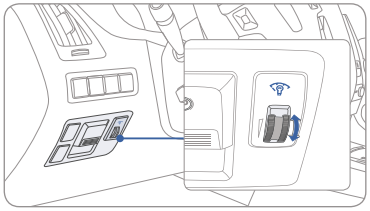

When the vehicle's parking lights or head lights are on, rotate the illumination control knob to adjust the instrument panel illumination intensity.

TRIP COMPUTER

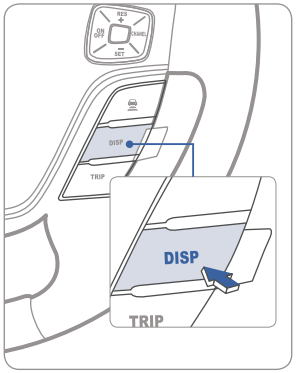

Press the DISP button for less than 1 second to select function as follows:

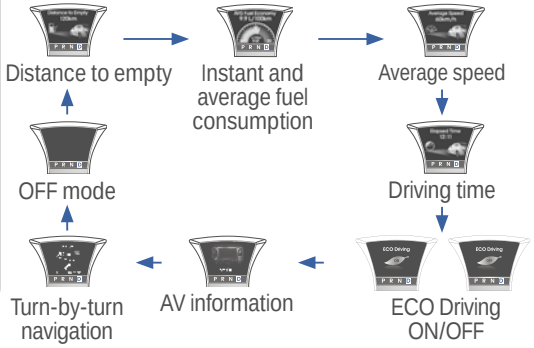

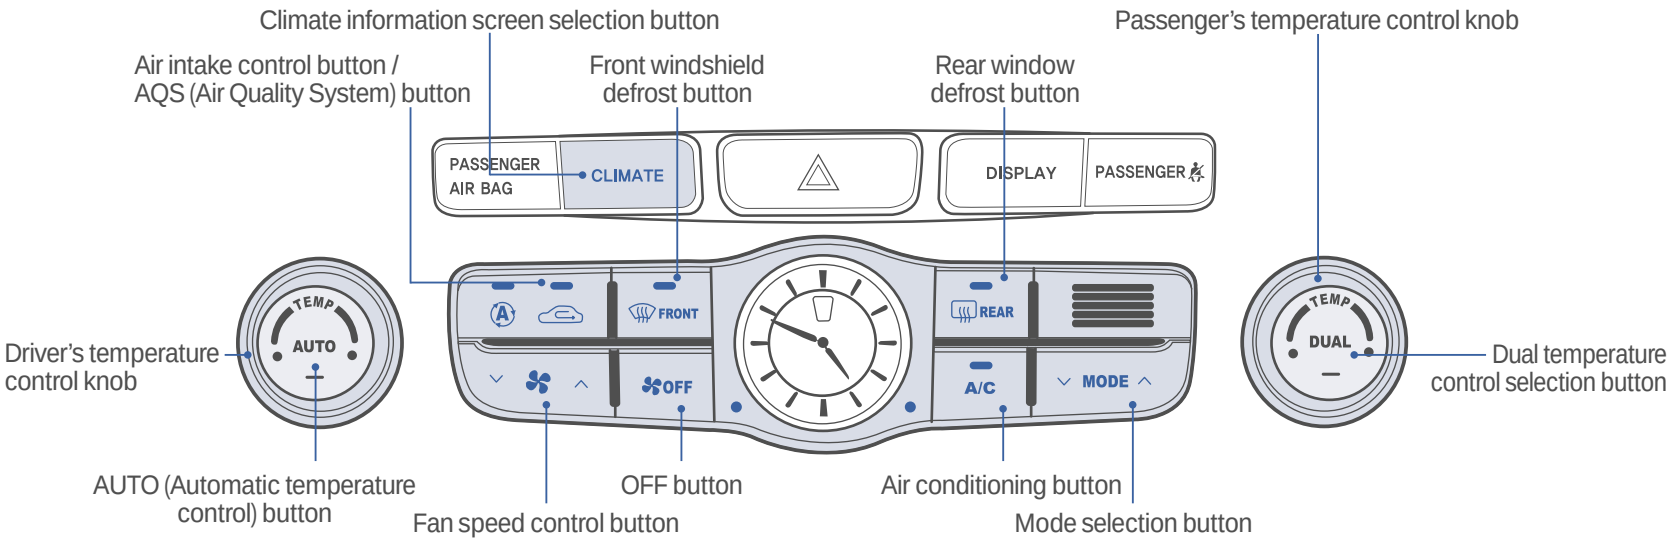

DEFOGGING/DEFROSTING

1. Press the defrost button.

2. Select warmest temperature.

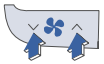

3. Set the fan speed to the highest speed.

SYSTEM OFF

Pressing the OFF button will place the system in the OFF mode.

- Front blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

Automatic heating / air conditioning

Controlling the modes, fan speeds, air intake, and air conditioning automatically.

Air Quality System

Controlling the air inflow from outside the vehicle automatically.

Air intake control

Outside (fresh) air position
Recirculated air position

Mode selection

Changing the direction of the air flow as follows:

STEERING WHEEL AUDIO CONTROL

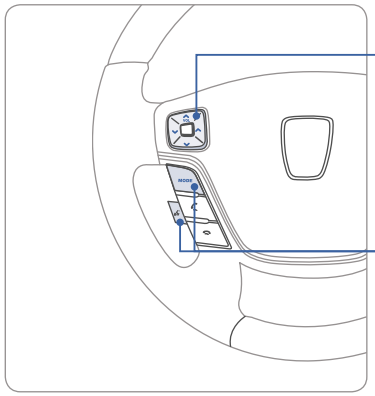

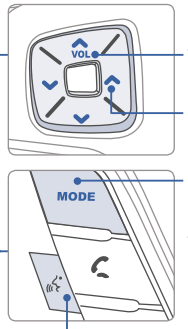

VOLUME

SEEK / PRESET

MODE
Calling up main functions or switching audio/video playback on/off.

VOICE RECOGNITION
Activate voice recognition system.

Please refer to your DIS Owner's Manual for a list of Voice Commands.

AUDIO CONTROLS

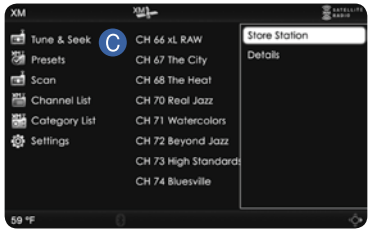

Tuning/listening to channels

1. Press FM/AM Ⓐ or XM® Ⓑ.
2. Select Ⓒ to set desired channel.

NOTE
A clear view of the southern sky is helps to ensure XM® radio reception.

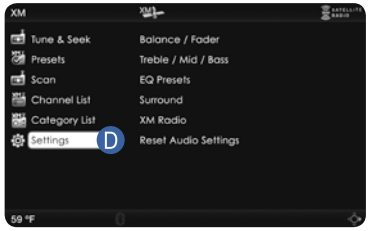

AUX, USB AND IPOD PORT

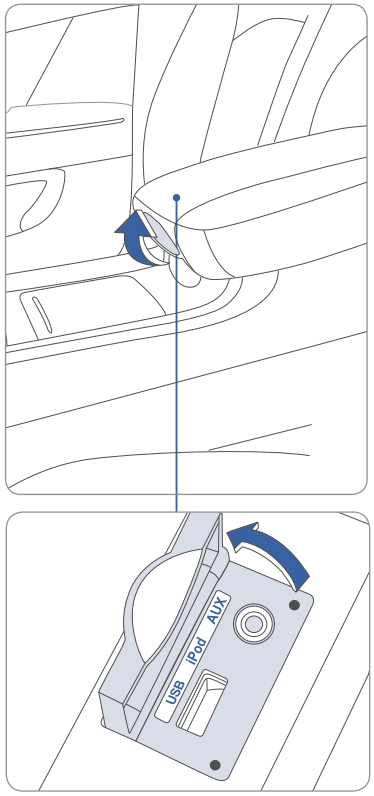

Use the input jack located inside center console to connect an external audio device and listen to it through the audio system in your vehicle.

NOTE
Use the Hyundai adapter cable to operate your iPod® through the vehicle's audio system.

iPod® is a trademark of Apple, Inc.

DRIVER INFORMATION SYSTEM (DIS)

The central control panel is located in the vehicle center console. It comprises the controller and main function buttons.

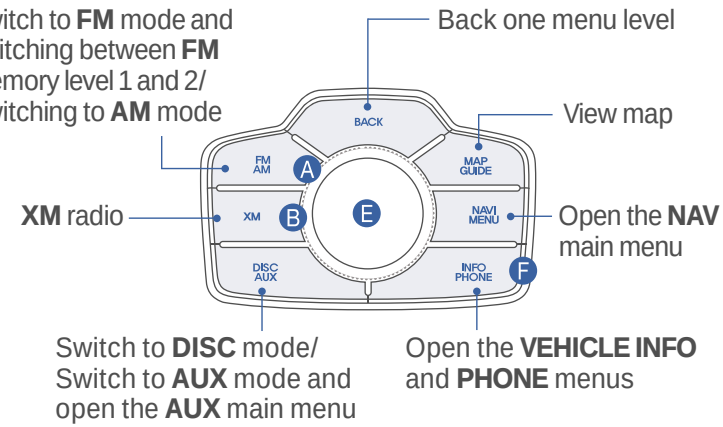

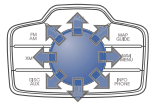

Scrolling through controller
Push to the left, right, backward, forward or diagonally.

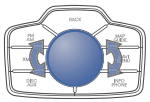

Turning the controller
Turn the controller until the desired menu item is highlighted.

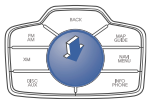

Pressing the controller
Confirming a highlighted menu item.

Please refer to your DIS Owner's Manual for more programmable options.

BLUETOOTH PHONE PAIRING

1. Press INFO/PHONE button F.
2. Select Connect Phone by turning knob E.
3. Select your phone under Pair Phone by turning knob E.
4. In your mobile phone Bluetooth setup menu, select Add New Device. The default name of the Bluetooth Device is EQUUS.
5. When prompted, enter the Passkey (Default Passkey 1234).
6. Equus will be displayed on the mobile device.

The contact list display may start with either first or last name depending on the phone make and model.

Please visit www.hyundaiusa.com\Bluetooth for a list of compatible phones tested to work with Hyundai's Bluetooth system.

DRIVER'S MAIN CONTROLS

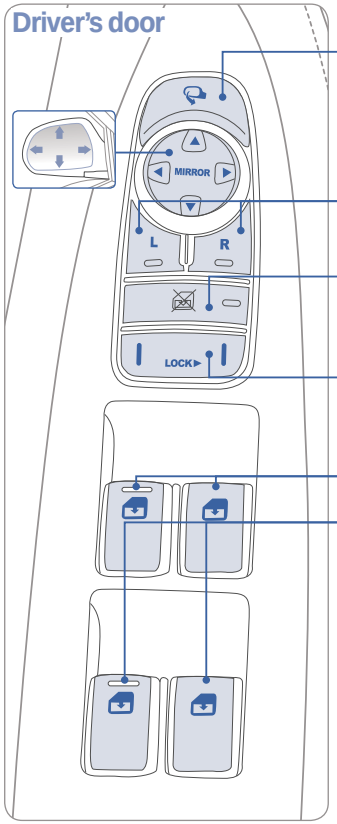

Outside Rearview Mirror

- Press to fold/unfold mirrors.

Press the lock or unlock button on the smart key twice, and the mirrors will be folded or unfolded.

- Press the L or R button. Adjust the mirror by using the directional switch.

Power window lock button
Disables the power window switches on the passenger doors.

Door Lock
Locks/unlocks all doors.

Window Switches

- Front doors power window switches
- Rear doors power window and curtain switches

With window and curtain up:
1st press operates curtain
2nd press operates window

NOTE: Rear door window switches operates the same way.

REAR WINDOW CURTAIN

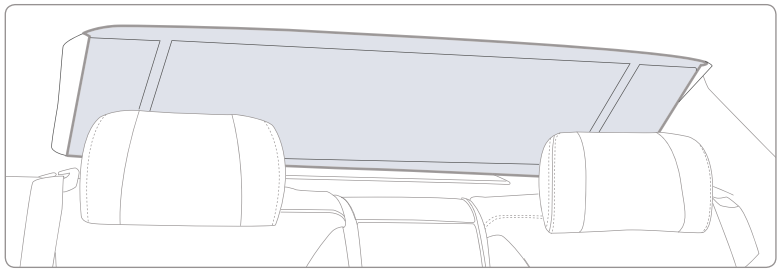

Ultimate Package

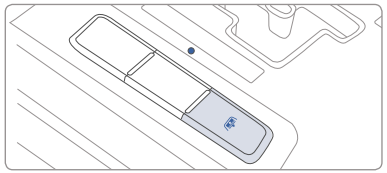

Signature Package

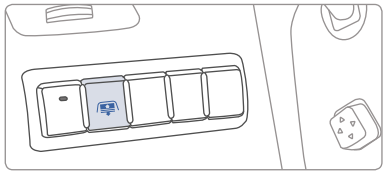

Press the button to lower.
Press the button again to raise.

CHILD-PROTECTOR REAR DOOR LOCK

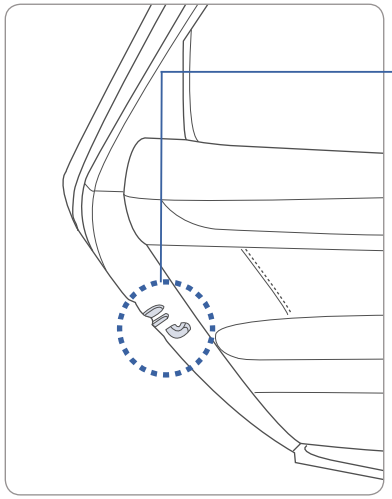

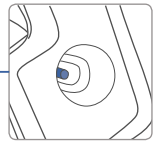

Push the child safety lock located on the rear edge of the door to the lock position.

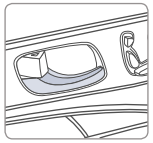

Even though the doors may be unlocked, the rear door will not open by pulling the inner door handle.

MASSAGE SEAT - RIGHT REAR SEAT

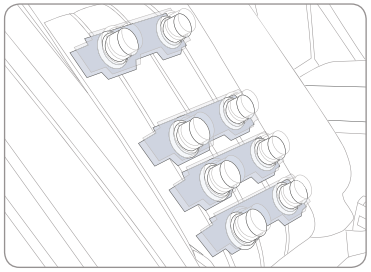

1. Point the remote control to the front passenger seatback receiver.
2. Press the ON/OFF button.
3. Select desired function.

NOTE
Massage remote is located in upper rear armrest compartment.

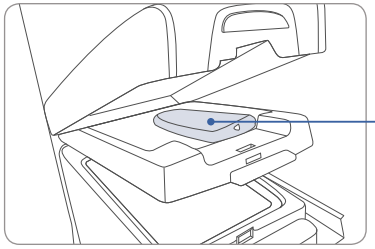

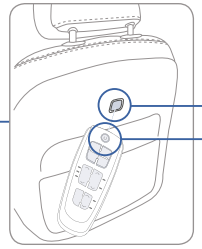

Upper rear armrest compartment

PARKING ASSIST SYSTEM (PAS)

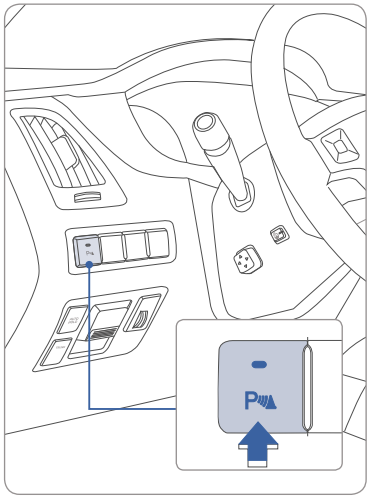

The Parking Assist System assists the driver during movement of the vehicle by chiming if any object is sensed within the distance of 24 inches in front of and 39 inches behind the vehicle.

To turn the PAS off, press the button.
To turn the PAS on, press it again.

If you move the shift lever to R with the engine start/stop button in ON and the parking assist system in OFF, the parking assist system will operate automatically.

TRUNK

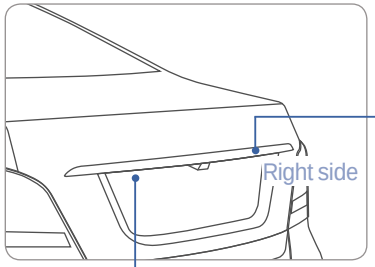

Opening

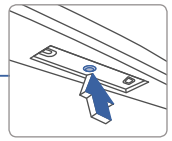

Rear soft-touch release
Press to open.
Smart key needs to be within range.

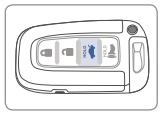

Smart key
Press to open.

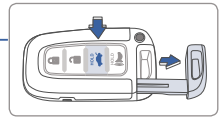

Mechanical key
Remove mechanical key from key fob and insert mechanical key into trunk lock cylinder.

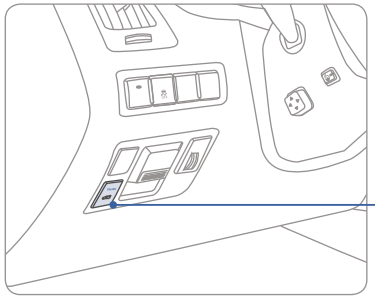

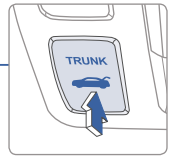

Interior trunk release
Press to open.
Press and hold to close.

Closing

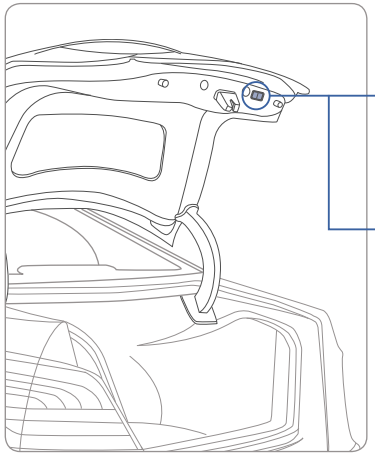

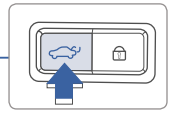

Power trunk lock buttons
Press to close.

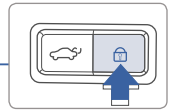

Press to close the trunk and lock all doors and trunk.
Smart key needs to be within range.

TRUNK LOCK BUTTON

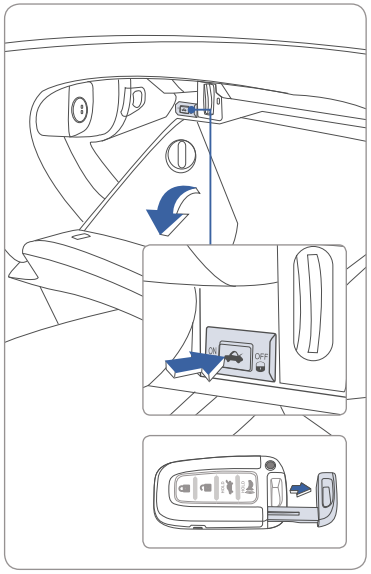

The trunk lock button is used to prevent unauthorized access to the trunk.

To activate the trunk lock system:

1. Open the glove box.
2. Press trunk lock button OFF.
   In the OFF position, the trunk can only be opened with the mechanical key.
3. Remove mechanical key from the smart key.
4. Close and lock the glove box with the mechanical key.

NOTE
Without the mechanical key, the smart key can only start the engine and operate door locks.

FUEL FILLER LID

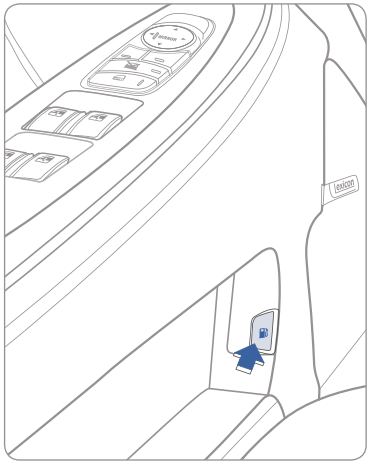

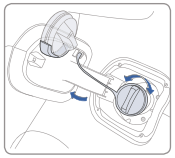

Open

1. Press the fuel filler lid opener button.
2. Pull the fuel filler lid out to fully open.
3. Turn the cap counter clockwise.

Close

1. Turn the fuel tank cap clockwise until it “clicks” one time.
2. Close the fuel filler lid securely.

NOTE
Failure to close could result in a check engine light.

HEATED STEERING WHEEL

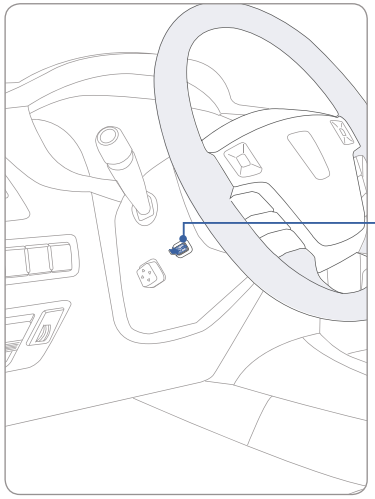

Pressing the heated steering wheel button warms the steering wheel. The indicator on the button is illuminated.

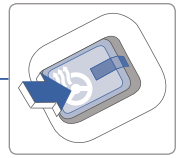

Heated steering wheel button

CLOCK ADJUSTMENT

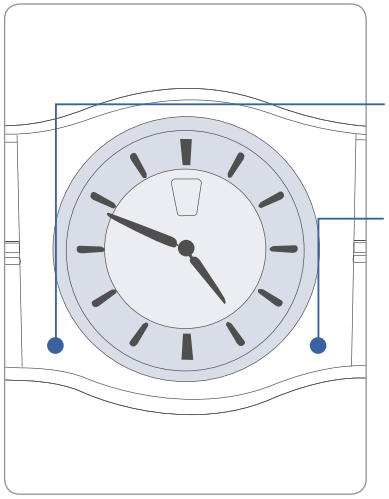

- Backward
- Forward
- Press and hold the button to set the clock backward or forward continuously.

SEAT WARMER AND COOLER (front seats)

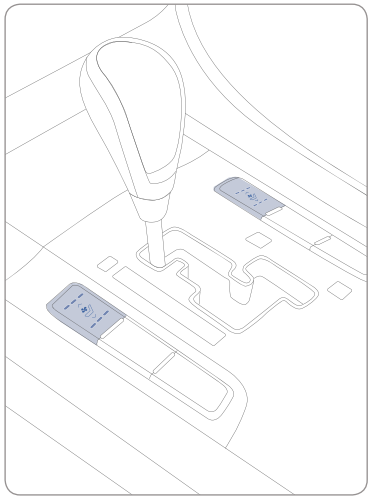

Seat Warmer and Cooler

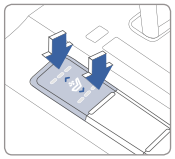

Top – Heat (red)
Bottom – Cool (blue)

Each time you push the button, the strength is changed as follows:

OFF → HIGH → MIDDLE → LOW

If you want to turn it off immediately, press and hold the button.

SUNROOF

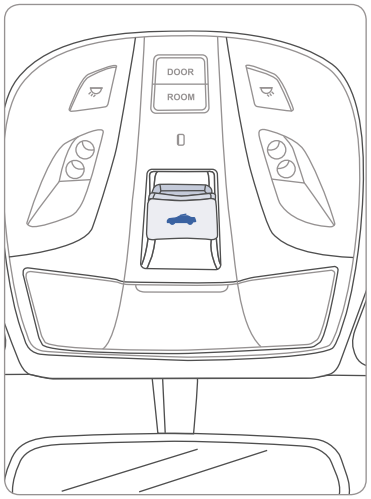

Sliding the Sunroof

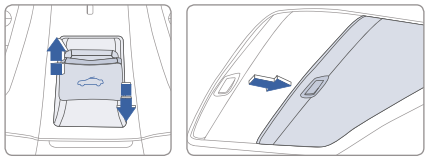

Tilting the Sunroof

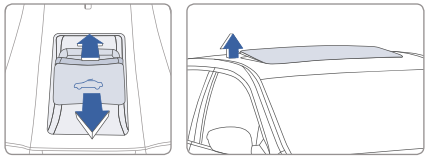

FRONT CAMERA

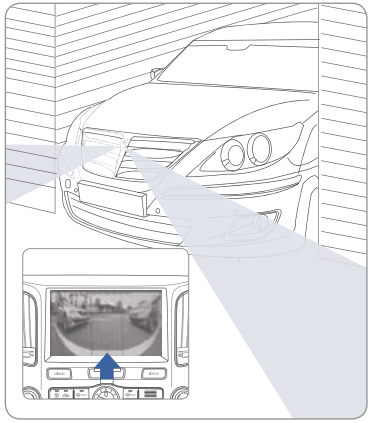

The front camera is a supplemental system that can show blind spots in front of the vehicle through the AV monitor. The front camera will operate when you press the button and shift the shift lever into N (Neutral) or D (Drive) while driving less than 6 mph.

NOTE
The front camera may not operate normally when you drive in extremely high or low temperatures.
Operating temperature: -13°F ~ 149°F

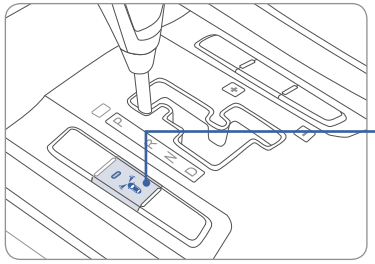

Press to turn ON/OFF front camera.

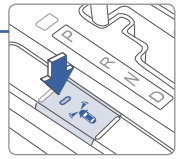

When front camera is on, radio or navigation screen will not be displayed.

COOL BOX

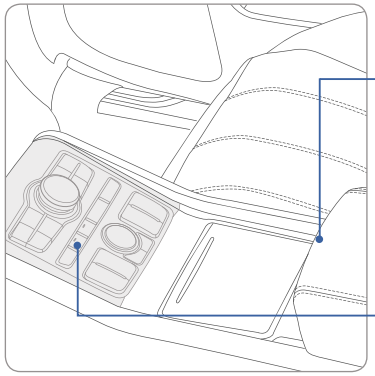

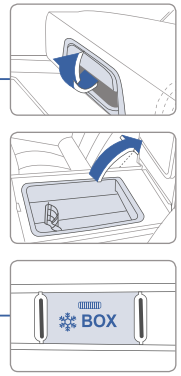

1. Pull up the lever.
2. Put the item in the cool box and close the cover.
3. Press the cool box ON/OFF button.

REAR SEAT CONTROLS – LOCKING

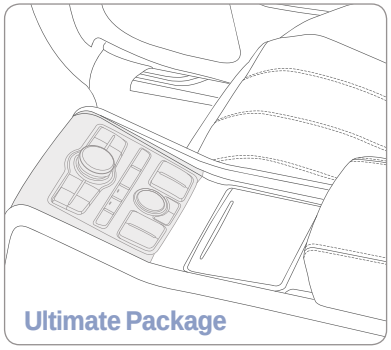

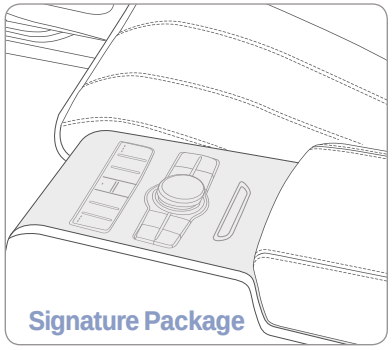

With RSE Lock ON, rear passengers cannot use the rear button controls. A lock icon will be displayed at the bottom of the front Audio screen.

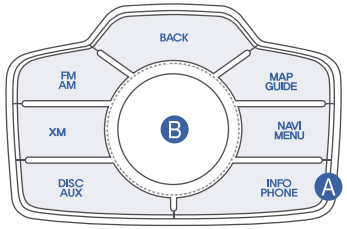

Press the INFO PHONE button Ⓐ.

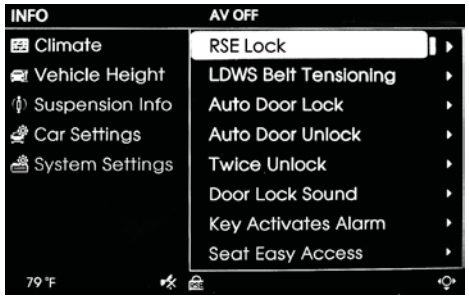

Toggle to Car Settings with the control knob Ⓑ. Select RSE Lock by pressing the control knob Ⓑ.

Select On and press the control knob Ⓑ.

HOMELINK WIRELESS CONTROL

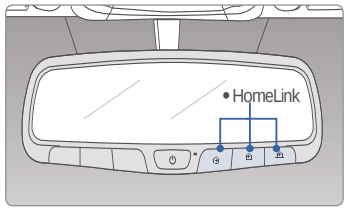

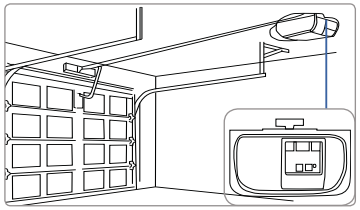

Programming Rolling Code Garage

Press and hold your selected HomeLink button for 20 seconds. Release when light flashes rapidly.

Press and release the “learn” or “smart” button on the garage door opener motor-head unit.
(Note: 30 seconds window to initiate next step.)

Press and hold the desired HomeLink button for 2 seconds and release. Repeat this sequence up to 3 times. If programming is successful, the garage door should open or close during this step.

For detail instructions including “Standard type” garage door, refer to your Own’ers Manual or visit www.homelink.com.

HomeLink® Wireless Control System

The HomeLink® Wireless Control System can conveniently replace up to three handheld radio-frequency transmitters for devices such as garage doors, estate gates, and home lighting. Controls for HomeLink® are located in the lower portion of the inside rearview mirror.

Refer to your Owner’s Manual for detailed instructions. Additional HomeLink® information can be found at www.homelink.com or by calling 1-800-355-3515.

ELECTRONIC STABILITY CONTROL (ESC)

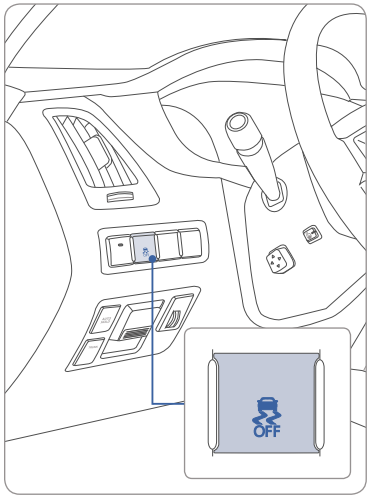

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

- To turn the ESC off, press the ESC OFF button.
- To turn ESC on, press it again.
- System automatically selects the ON position when the engine is started.

ELECTRONIC AIR SUSPENSION (EAS)

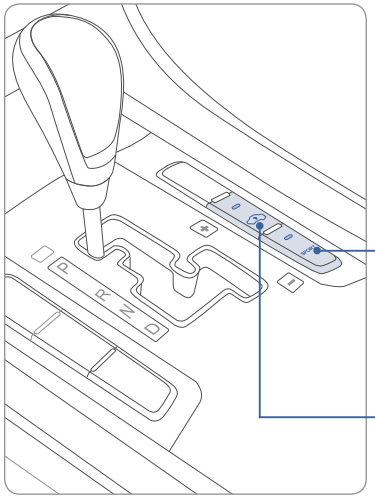

EAS controls the vehicle suspension automatically to maximize passenger comfort.

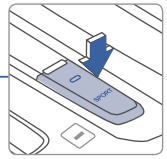

SPORT mode provides sportier suspension, steering, and transmission calibrations.

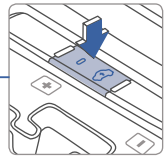

Vehicle height control button raises the vehicle height for rough roads or easier passenger entry/exit.

NOTE
You may hear the air pump activate with the key off. This is normal.

ELECTRONIC PARKING BRAKE (EPB)

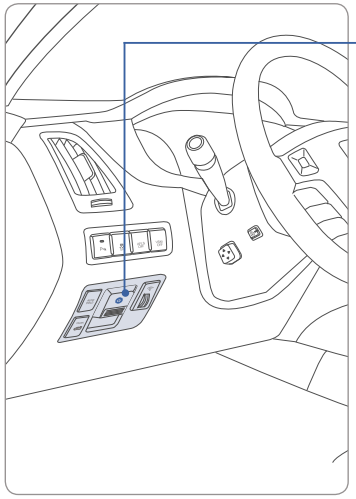

Applying

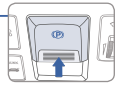

Stop the vehicle, then press the EPB switch.

Releasing

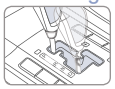

Move shift lever from P to R, N, or D while depressing the brake pedal.

or

Pull the EPB switch while depressing the brake pedal.

NOTE
If necessary, emergency braking is possible by pressing and holding the EPB switch.

AUTO HOLD

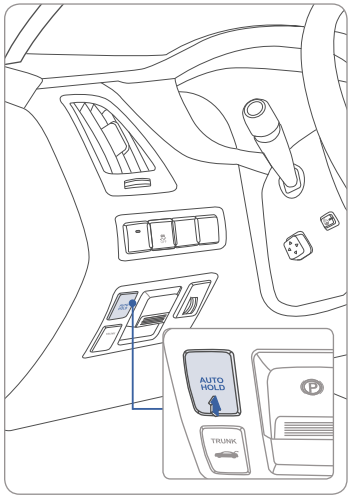

The Auto Hold feature assists in steep hill areas. It holds the brake applied until the accelerator pedal is pressed.

1. Press the AUTO HOLD switch.

2. Stop the vehicle by pressing the brake pedal. The brake will remain engaged even if the brake pedal is released.

3. The brake pedal will release when the accelerator pedal is pressed with transmission in D or Sports Mode.

To cancel the AUTO HOLD operation, press the AUTO HOLD switch again.

LANE DEPARTURE WARNING SYSTEM (LDWS)

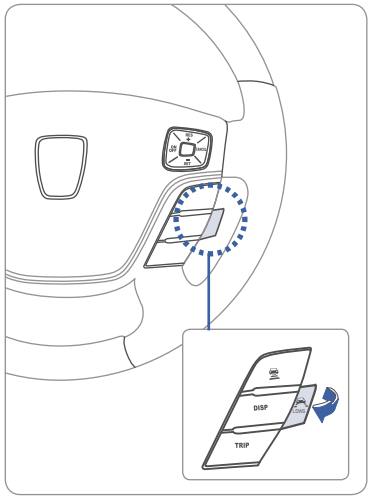

LDWS detects the lane with the sensor at the front windshield and warns you when your vehicle leaves the lane.

- To turn LDWS on, pull the LDWS switch.
- To turn LDWS off, pull the switch again.

LDWS operates only while the vehicle speed is over 43 mph.

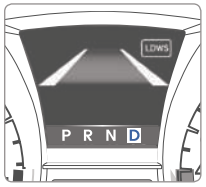

NOTE
See DIS manual for more information to program LDWS seat belt tensioning alert ON/OFF.

REAR MONITOR

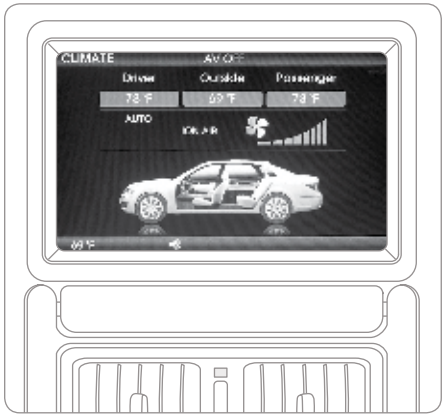

The rear monitor is mounted on the center console between the backrests of the front seats.

SMART CRUISE CONTROL

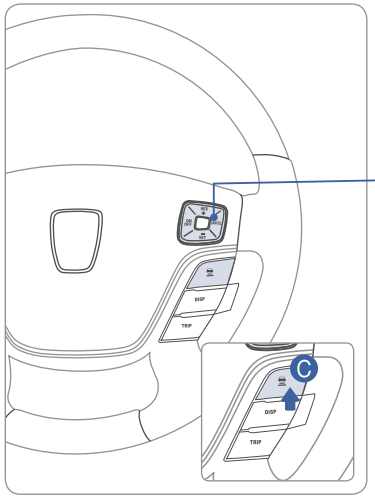

Smart Cruise Control system allows you to set the distance from the vehicle ahead and maintain the selected distance even if you do not press the accelerator or brake pedal.

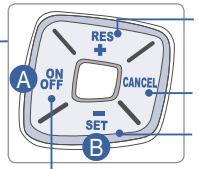

- To Resume or Increase the cruise control speed
- To Cancel the cruise control
- To Set or Decrease the cruise control speed
- To turn cruise control On/Off

1. Press button A to turn on.
2. Press B to set the speed.

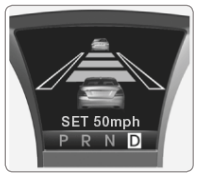

Distance 3

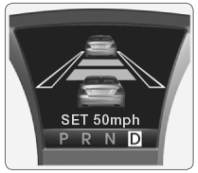

Distance 2

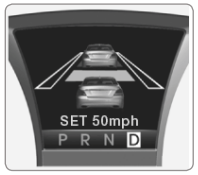

Distance 1

To Set vehicle distance

3. Press button C. Three distances are available:

- Distance 3 –180 feet
- Distance 2 –130 feet
- Distance 1 – 85 feet

Distances are approximate.

When there is a vehicle ahead in the lane

4. The vehicle will accelerate or decelerate to maintain the selected distance.

Refer to your Owner's Manual for additional operational instructions and other cautionary advisories on Smart Cruise Control.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

LOW TIRE PRESSURE INDICATOR: Illuminates if one or more of your tires is significantly under-inflated. Safely park the vehicle and check your tires as soon as possible, and inflate them to proper pressure.

NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure light to illuminate. Inflate tires according to the Tire Pressure Label located on the driver's side door pillar.

LOW TIRE PRESSURE POSITION INDICATOR: Indicates which tire is significantly under-inflated by illuminating the corresponding postion.

TPMS

TPMS MALFUNCTION INDICATOR: Illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai Equus dealer as soon as possible.

ECO SYSTEM

ECO indicator

The ECO indicator light will illuminate when you drive with the high efficiency. The ECO indicator can be turned off by selecting the function through the trip computer and pressing the DISP button for over 1 second; ECO OFF will then appear.

REARVIEW CAMERA

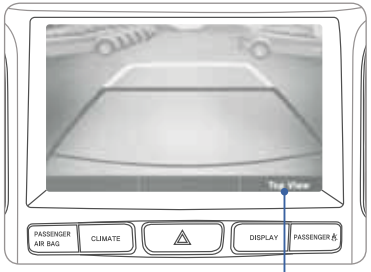

Select by using DIS toggle switch.

When transmission is shifted into R (Reverse), rearview camera displays the area behind the vehicle.

Use DIS controller to select rear view.

- BACK–view straight back (default setting)
- TOP–tilts camera view down to see directly behind rear bumper

Program Coverage Summary

At Your Service Program is included for the first 5 years or 60,000 miles, whichever comes first.				
Complimentary Services	**Valet Services**	**Complimentary Rental Vehicle**	**Maintenance**	**Wear Items**
Equus Original Owner or Lessee	Yes	Yes	Yes	Yes
Equus Subsequent Owner or Lessee	Warranty Only	Warranty Only	No	No

See below for program terms and conditions.

VALET SERVICE

Valet service is available while your vehicle is receiving At Your Service free maintenance, wear items, or warranty repairs by an Authorized Equus Dealer. Simply contact your Authorized Equus Dealership's Service Advocate or contact the Equus Customer Connect Center at (877) 378-8727 to make your appointment. The dealership will work with you to arrange your pickup and delivery time and location.

- Valet appointments must be made at least 2 business days in advance.
- Valet area of coverage is valid only within an estimated 1 hour drive time distance (based on traffic, weather, and road conditions) from the participating dealership location to the pickup/delivery location.
- Valet pickup and delivery must occur during normal business hours. After-hours pickup and delivery are at the discretion of your participating dealership.
- You must notify your Equus Service Advocate 1 business day in advance if location or time of valet services change. If a change or cancellation is not made at least 1 business day in advance, you may be charged a fee, or valet service may be cancelled.
- You will be charged a fee if you elect to extend the use of the courtesy replacement vehicle or delay the delivery of your vehicle.
- Prior to or at the time of pickup, you will need to provide your valet with the following information if a courtesy replacement vehicle is needed:
  - Insurance company name, policy number, and expiration date
  - Driver's license number, state, expiration and birth date
  - Credit card number and expiration date (standard requirement for rental car use)
  - The above information for any additional drivers

Equus owner must provide the valet with an Equus that is currently registered in compliance with local and state laws. Road tolls incurred during the valet service may be charged to the vehicle owner.

COMPLIMENTARY RENTAL VEHICLE

We come to you and provide you with alternative transportation. While your vehicle is being serviced under this program, qualified drivers will be provided a courtesy replacement Hyundai Equus or Hyundai Genesis at no additional cost. You must be at least 25 years of age (in most states), with a valid driver's license to drive a replacement vehicle. Please provide your Service Advocate with the following information:

- Insurance company name, policy number, and expiration date
- Driver's license number, state, expiration and birth date
- Credit card number and expiration date (standard requirement for rental car use)
- The above information for any additional drivers

FREE MAINTENANCE AND WEAR COVERAGE

Vehicle Eligibility

For original retail owners of the 2011 Equus, we (Hyundai Motor America) cover all factory-recommended scheduled maintenance and normal wear parts replacement for the first 5 years or 60,000 miles, whichever comes first. The At Your Service Program is applicable to all 2011 model year Hyundai Equus United States specification vehicles purchased in the United States from Authorized Equus Dealerships. The program is not in effect outside of the United States.

- Vehicle coverage begins on the date of first retail sale. Fleet vehicles are excluded from this program.
- If the vehicle becomes damaged (such as by accident, fire, act of nature, etc.) and is subsequently titled salvaged, flooded, or reconstructed, it is no longer eligible for the benefits of the Equus At Your Service Program.

Guidelines for Scheduling Maintenance

The At Your Service Program covers normal factory-recommended scheduled maintenance for the first 5 years or 60,000 miles, whichever comes first. Severe use maintenance intervals are not covered by this program. Covered maintenance costs include all labor and parts necessary to complete the factory recommended service. Having your vehicle serviced at the specified time/mile intervals is critical in maintaining long-term durability. Failure to have your vehicle serviced at the specified interval may invalidate the warranty under certain circumstances.

If for any reason a service is missed, the Authorized Equus Dealership will perform the next or missed major service.

Some owners may wish to have their oil changed more frequently. The customer must pay for any additional services performed on the vehicle. Service procedures not specifically referenced in the Equus Customer Care Quick Reference Guide must be preauthorized by a Hyundai District Service Manager.

EQUUS AT YOUR SERVICE PROGRAM TERMS AND CONDITIONS

FREE MAINTENANCE AND WEAR COVERAGE (continued)

Guidelines for Normal Wear

The Hyundai Equus Maintenance Program includes coverage for specific items that may wear out under normal use (see below) for the first 5 years or 60,000 miles, whichever comes first. To qualify for replacement, the wear limit must be at or below the minimum service limits as specified by Hyundai Motor America technical reference manuals. Tires are excluded from this program.

Items covered under normal wear include:

- Front and rear brake pads
- Front and rear brake discs
- Windshield wiper blade inserts
- Battery

Exclusions from Coverage

The following items, without limitation, are not covered by the At Your Service Program:

- Gasoline and gasoline additives
- State inspections
- Wear and tear of soft trim, including seats, carpets, door casings, wood veneer, headliner, and all chrome trim
- Wear and tear or damage to exterior body panels, trim, and glass
- Damage due to poor fuel quality, misuse, abuse, neglect, fire, accident, flood, or installation of unapproved parts and accessories
- Vehicles used in competitive events
- Vehicles with an unreadable/tampered VIN, or where true mileage cannot be determined
- Repairs and maintenance not performed at an Authorized Equus Dealership
- Repairs covered under the Hyundai New Vehicle Limited Warranty
- Required maintenance and covered wear parts replacement on United States specification vehicles operating outside the United States

Transfer of Coverage

The described coverage only applies to the original retail purchaser or original lessee of a Hyundai Equus. The coverage is not transferable to subsequent owners, with the exception of immediate family members. Immediate family members include the following:

- Spouses or registered domestic partners
- Parents
- Children or stepchildren

Dealerships will verify that the owner/customer is the original owner/lessee. Certain limitations and exclusions apply to this program. Please refer to your New Vehicle Limited Warranty for warranty details.

Key Websites

Hyundai website - www.hyundai.com
Hyundai owner website - www.myhyundai.com
Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth
Blue Link - www.hyundaiusa.com/Bluelink/Overview.aspx

Customer _____ Date _____

EQUUS CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- ☐ CONFIRM “GOOD BATTERY” USING GR8 AND STAPLE TEST TICKET HERE
- ☐ CONFIRM COLD TIRE PRESSURE IS SET TO PLACARD
- ☐ CONFIRM SHIPPING FUSE IS IN POSITION
- ☐ VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES - CLEAN WINDSHIELD AND BACK WINDOW
- ☐ ENSURE FLOORMATS ARE SNAPPED INTO PLACE (if applicable)

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

☐ SMART KEY – page 02

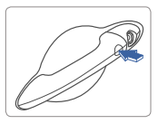

Lock
Press the door handle lock button.



Unlock
Pull handle to unlock. Smart key must be within range.

NOTE: LOCK BUTTON WILL NOT UNLOCK DOOR.

☐ FOLDING POWER OUTSIDE MIRRORS – page 15

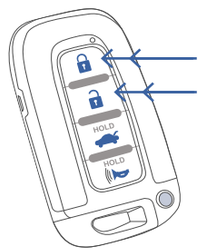

Press the lock or unlock button twice and the mirrors will fold or unfold.